




PAPA HUBBA NX

Assembly Instructions


1 PREPARE FOR SETUP

1. Stake out eight corners tightly.

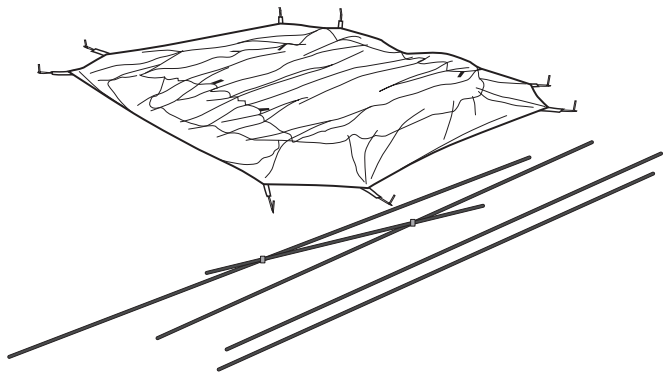


2 ATTACH HUBBED POLES

1. Insert main pole tips into floor grommets with red webbing.
2. Insert main ridge pole into grommets above doors; attach clips.

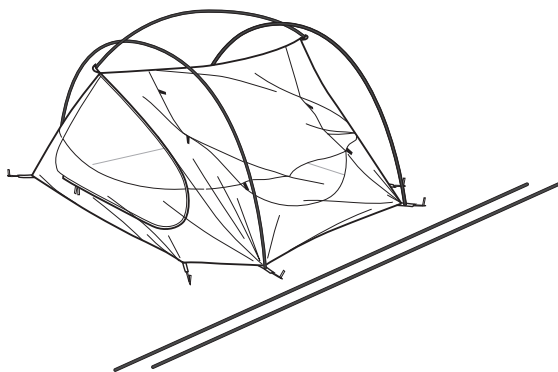


3 SETUP VESTIBULE

1. Place gray side poles over main poles and insert into grommets.
2. Attach gray webbing clips to gray side poles.

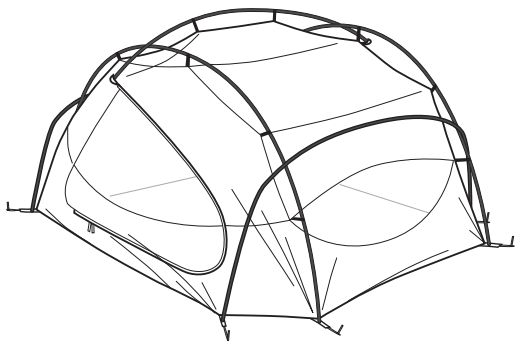

4 STAKE VESTIBULE

1. Lay rainfly over tent, aligning with doors. Insert short pole tips into rainfly grommets. Secure Velcro tabs.
2. Insert main poles into rainfly grommets; secure Velcro hook/loop pole attachments.
3. Stretch out vestibules till taut, stake down.

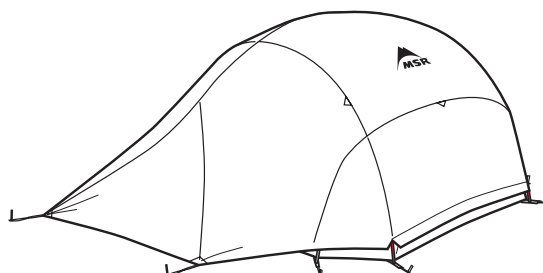

MOUNTAIN SAFETY RESEARCH®

© 2019 Cascade Designs, Inc.

4000 First Avenue South

Seattle, WA 98134 USA

1-800-531-9531 | 1-206-505-9500